



Installation Guidelines

Superdry Heavy Traffic

Equipment & Materials

- Clean Cloth
- Tape Measure
- Dust Pan & Brush
- Bucket & Mop
- Cleaning detergent
- 3M Surface Cleaner
- Scissors

Materials

- Superdry Heavy Traffic
- Double sided tape



Superdry Heavy Traffic




Preparation

For best results it is advised to install Superdry Heavy Traffic on a level and clean floor. Simply follow these simple steps to achieve a durable, clean and adaptable flooring finish in your chosen area:



Degrease

Clean the existing floor to ensure that it is grease and oil free and that the surface is clean and dry and free of dust and dirt.



Double Sided Tape

Cut the tape into strips to fit the length of the matting. Peel off the backing from the tape and apply to the matting as detailed on the drawing below.




Clean back of mat

Clean and degrease the back of the mat and ensure it is free of dust and dirt.

Application

1

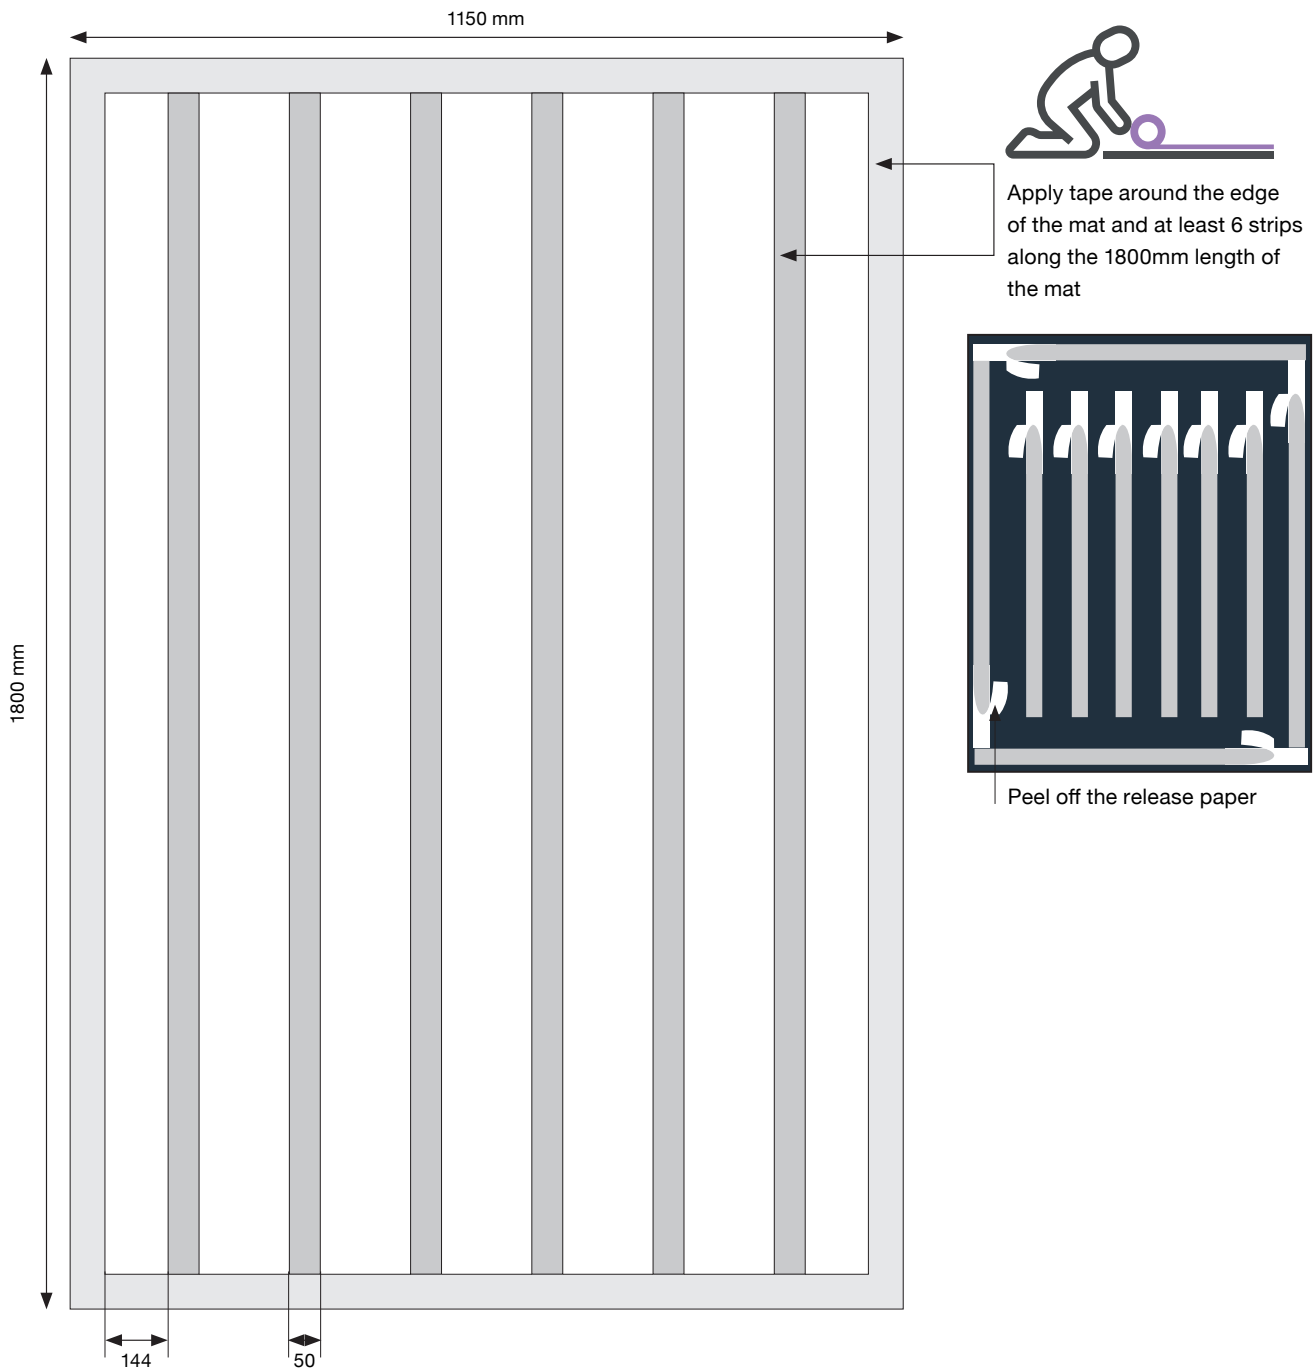


2

Two person finish

Once the tape is applied to the back of the mat peel off the release paper. With two people carefully turn over the mat and apply the mat to the floor.

For areas with more than one mat repeat the process.

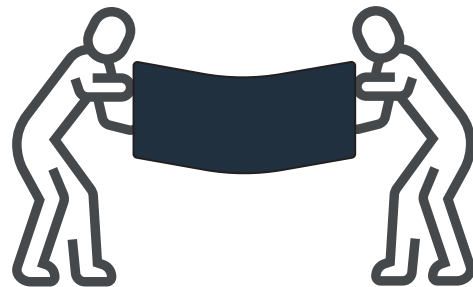

Disclaimer

We recommend that you use 3M Surface Cleaner or one with a similar composition when preparing the floor for installation. Please don't use any aggressive cleaning substances which contain alcohol, acetone or similar as this may react with the rubber backing. Please don't turn the forklift wheels or make circular manoeuvres whilst moving over this mat.

If in doubt, please contact us:

Call: **+44 (0)1788 228 555** or email **sales@coba.com**