COBA

Installation Guidelines

COBA Track Mat

Tools & Materials

Tools
Socket set / Spanner (PU Version only)

Materials
COBA Track Mat
Connectors (PU / Steel)

*Installation requires atleast 2 people

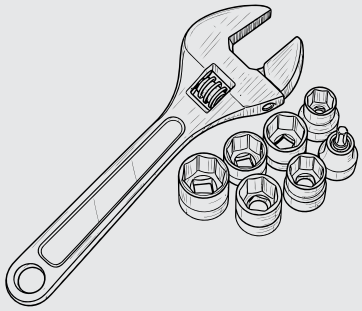

COBA Track Mat

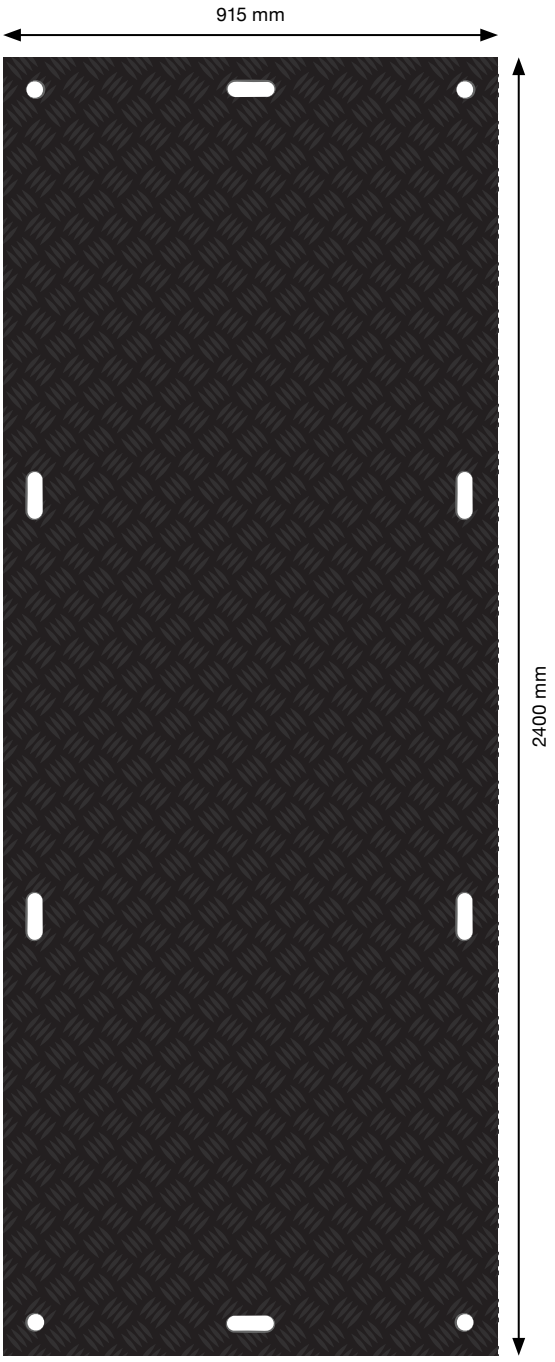

Steel Connector

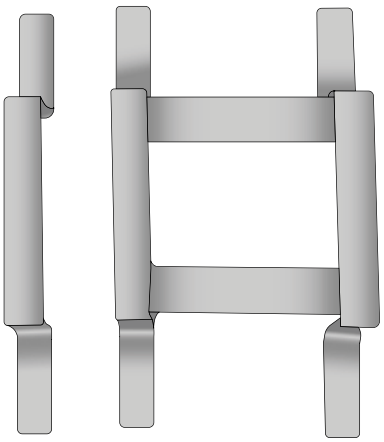

PU Double Connector

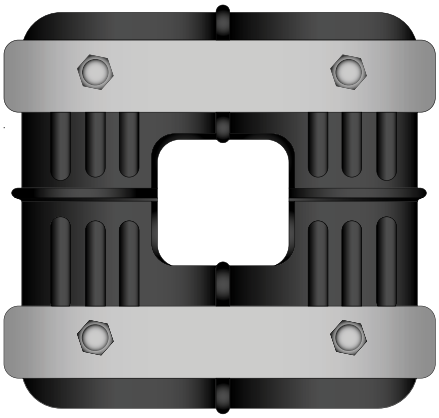

PU Single Connector

Installation

1

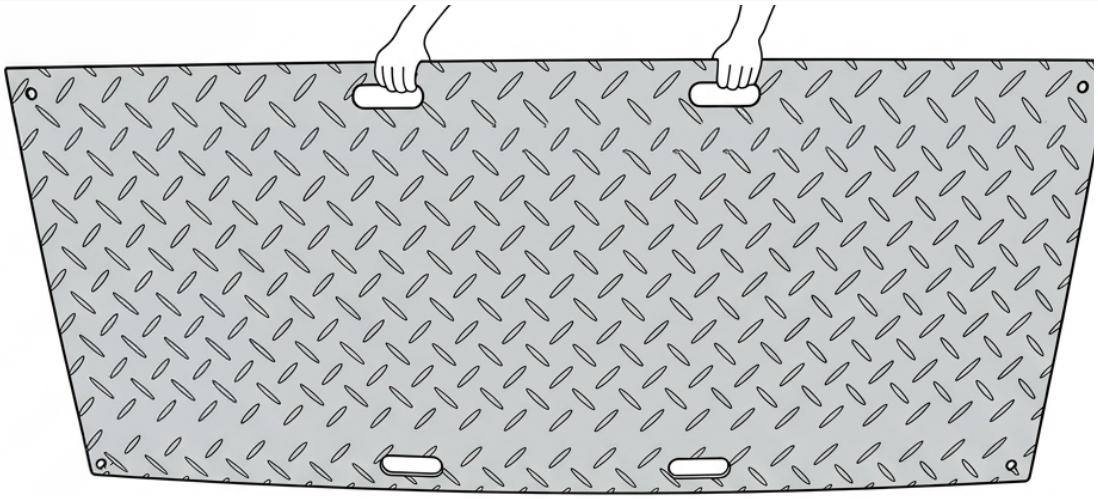

2 Place one end of the Steel Connector into the designated slot and with 2 HD mats at a right angle to each other.

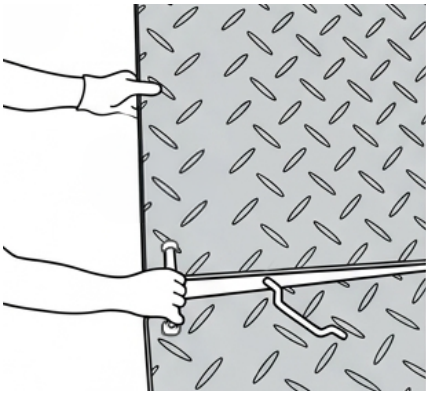

3 Place the other end of the Steel connector into the opposing mat.

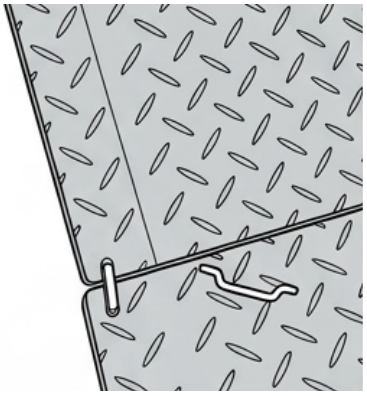

4 Once both Steel Connectors are in place, lay the upright HD mat onto the ground so both HD mats are side by side.

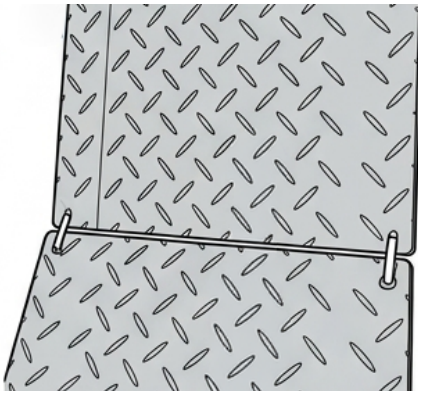

5

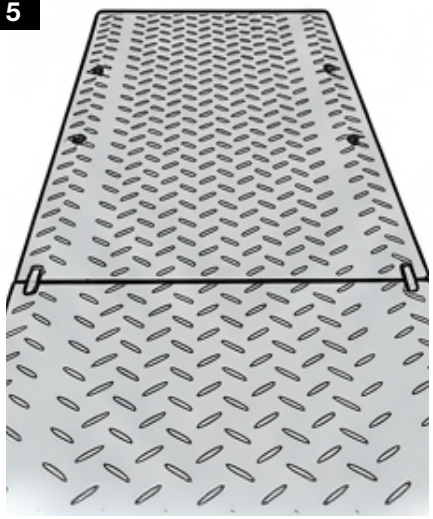

6 Continue process in whichever direction is required until area is sufficiently covered.

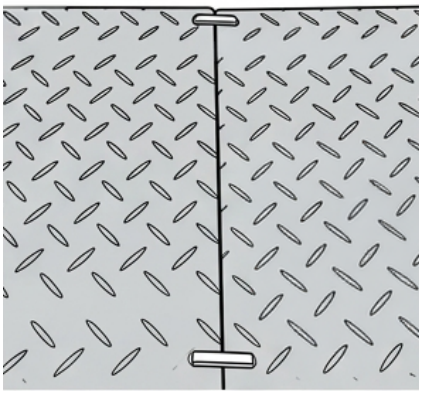

7 To remove HD mats, simply follow the same process, in reverse.

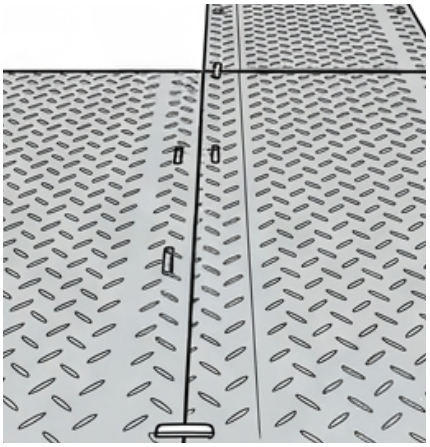

PU Connectors can be locked in place using a socket/allen key, whilst HD mats are laid down side by side, in any direction.

Types of Connectors

1 **PU Connectors:**

- Easy to install and disassemble
- Can be reused

PU Single Connector

PU Double Connector

2 **Steel Connectors:**

- Install firmly
- Will not tear apart
- Cost-effective
- Can be reused

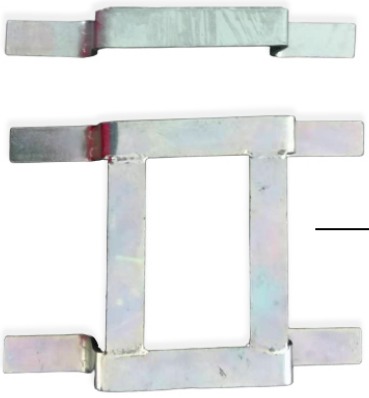

Steel Single Connector

Steel Double Connector

+44 (0)1788 228 555
sales@coba.com

Europark Industrial Estate
A5 Watling Street
Rugby | CV23 0AL
United Kingdom

coba.com